



Dell Inspiron 7568 LCD Screen Replacement Guide

This guide will demonstrate how to replace the LCD screen assembly for the Dell Inspiron 7568.

Written By: Yash Samant



INTRODUCTION


By following the steps in this guide one should be able to replace the screen on the device (Dell Inspiron 7568).



TOOLS:



- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

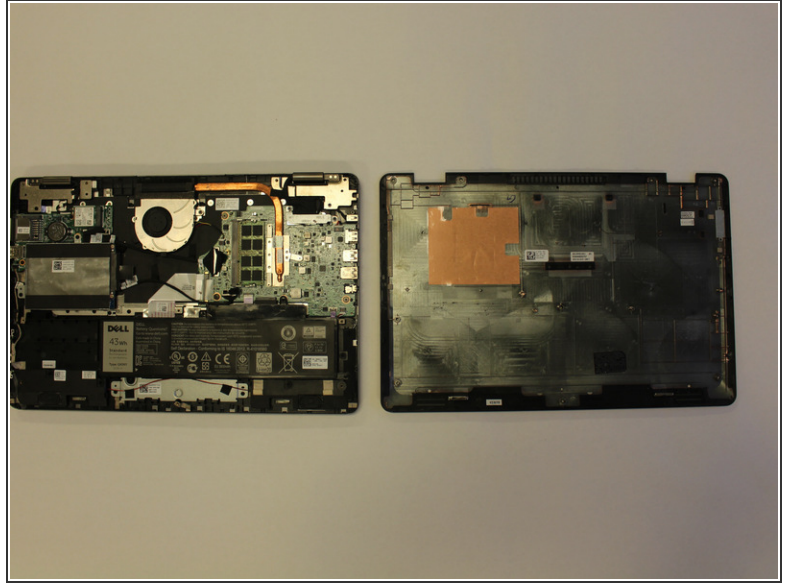



- Unscrew & remove the ten 7mm screws (using a ph1 screwdriver) holding the bottom cover
- Remove the bottom cover

Step 2

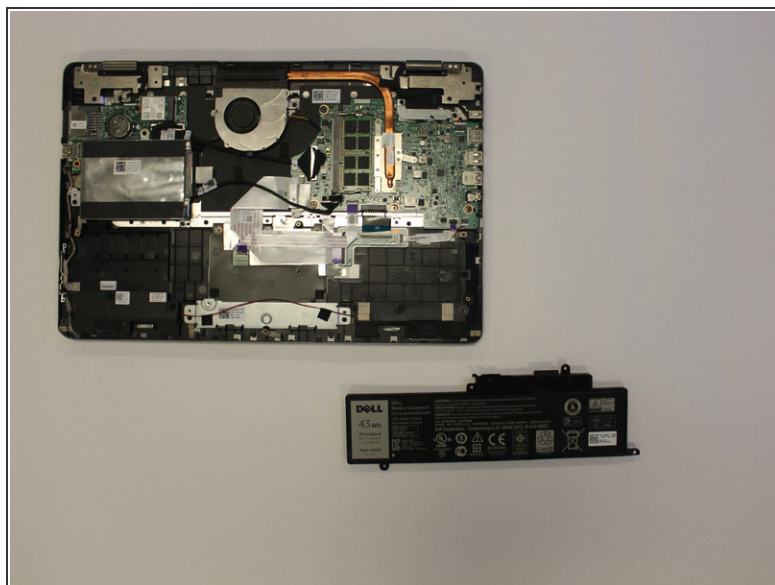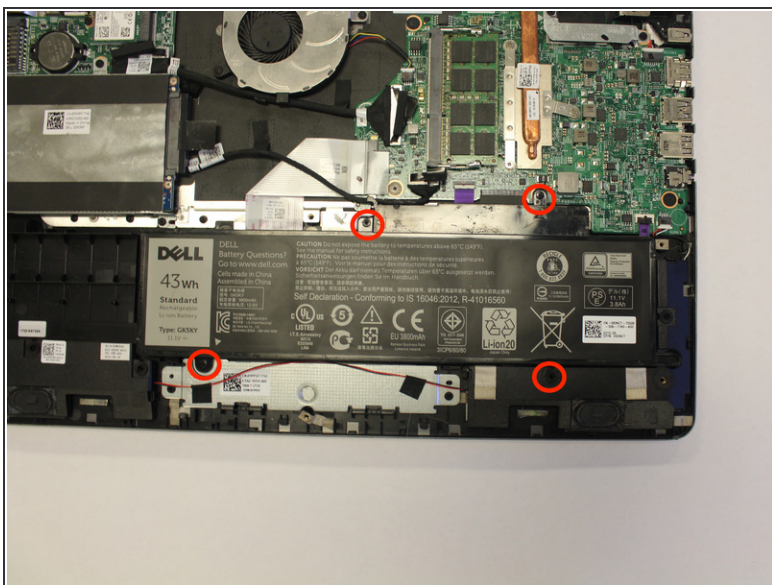



- Unscrew & remove the four 3mm screws (using the ph1 screwdriver bit) holding the battery
- Unhinge the connector cable to the battery
- Remove the battery

Step 3 — LCD Screen Display

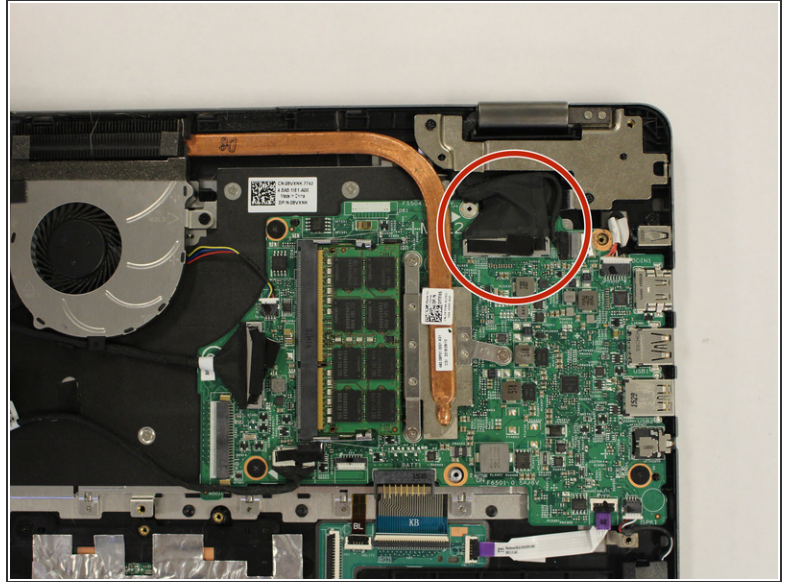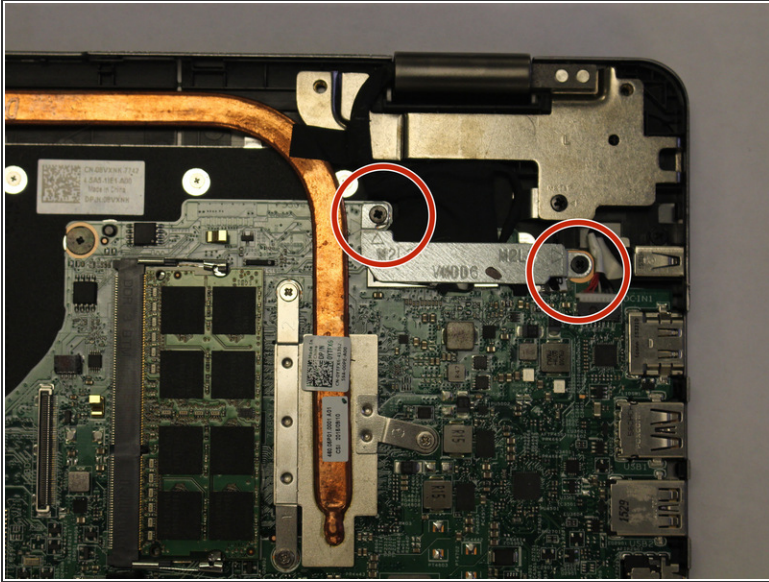


- Unscrew & remove the two 3mm screws (using a ph1 screwdriver bit) and the cable bracket, above the motherboard
- Doing this will allow one to access the LCD-motherboard connector cables.

Step 4

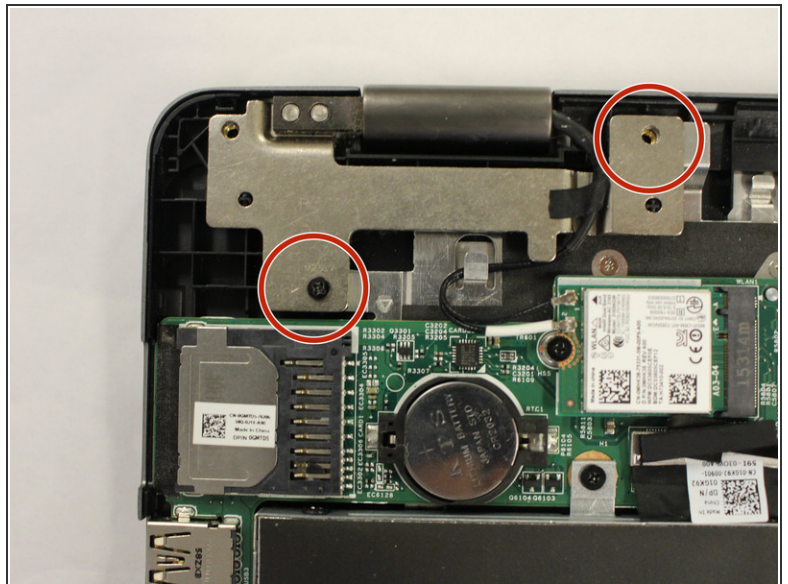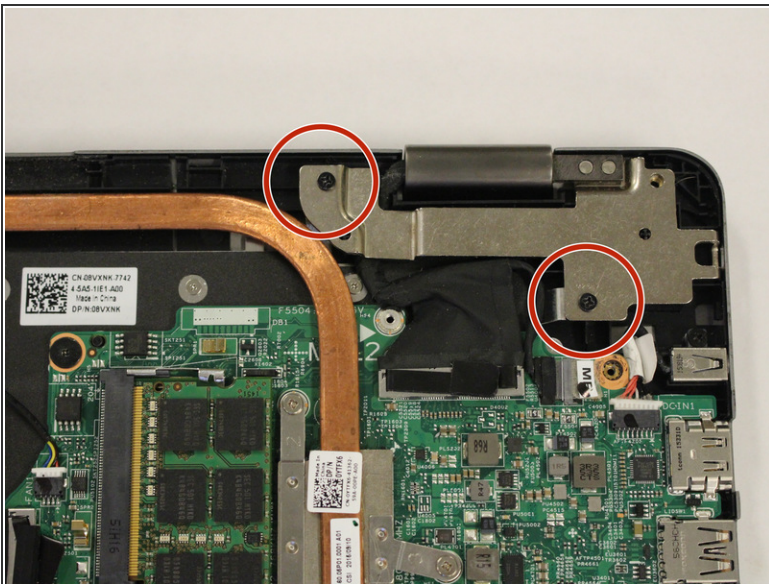


- Unscrew the 7mm screws that secure the left and right hinges (using a ph1 screwdriver bit).

Step 5

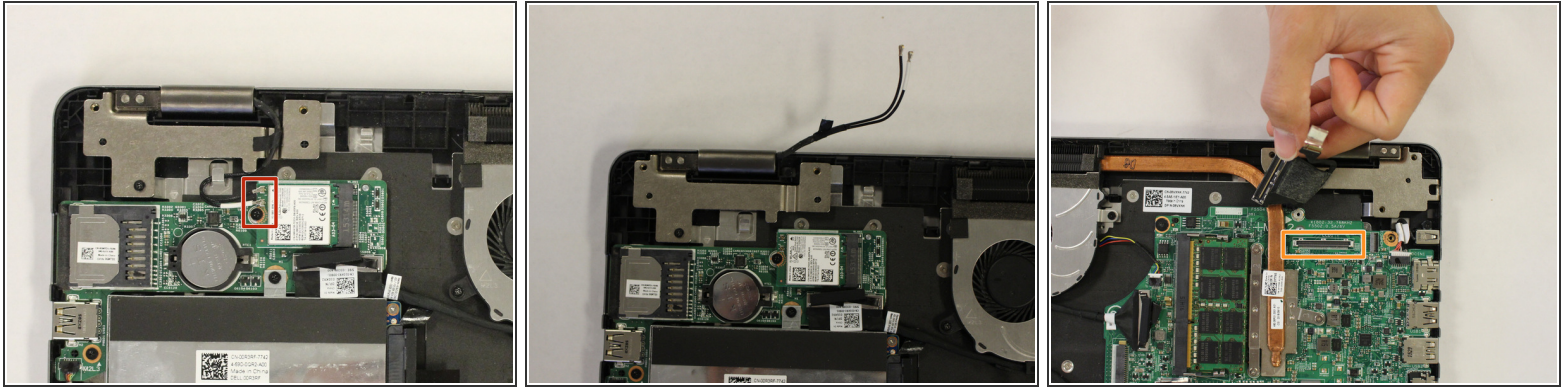

- Disconnect the antenna cable (under the left hinge)
 - Disconnect the LCD and Touchscreen display cables under the right hinge.
- i** These are a set of two cables. For better image see image two in step one of this guide.

Step 6

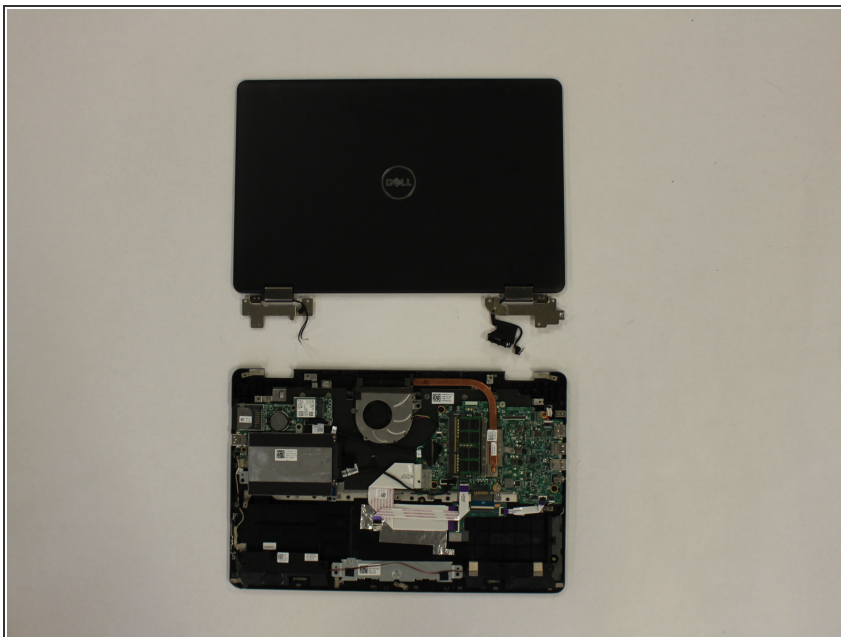

- Carefully separate the screen from the bottom half of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-05 07:45:20 PM.